

Whole House Fan

WHF 1500VS, GF 1500T, WHF 3000VS, GF 3000T Installation Instructions



For the most current Installation Instructions, please visit www.solatube.com/instructions
Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE



Whole House Fan


WHF 4500VS, WHF 6000VS Installation Instructions



Parts List *		Quantity
1	Fan Assembly (WHF 6000VS Shown)	(2)
2	Damper Box Cover and Insulated Ducting Assembly	(2)
3	Damper Box	(2)
4	Fan Grill	(1)
5	HushMount [™] Assembly	(2)
6	Fastener Kit	
	a. Screw #8 X 1-1/2 in (38 mm) Hex Head Drill Tip	(24)
	b. Screw #8 X 5/8 in (16 mm) Hex Head Drill Tip	(28)
	c. Washer	(4)
7	Variable Speed Remote Control (Sold Separately)	
8	Nylon Strapping (Sold Separately) (Not Shown)	
9	Foil Tape (Sold Separately) (Not Shown)	

Required Tools:

Keyhole Saw	
Screw Gun with 1/4 in Nut Driver (Hex Head)	
Tape Measure	
Utility Knife	
Screwdriver with Phillips Head	
Pencil	
Required Safety Equipment	

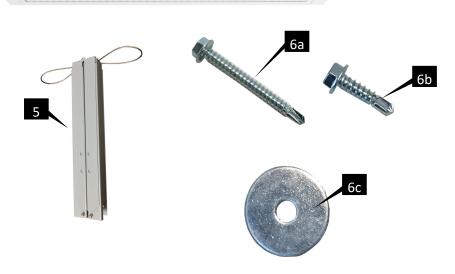



For the most current Installation Instructions, please visit www.solatube.com/instructions
Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE

2





Do not proceed with the installation until you have read the entire instructions, including these warnings. Use of materials or methods not authorized by Solatube International will result in an invalid warranty.

Solatube International, Inc. (seller) assumes no responsibility or obligation whatsoever for the failure of an architect, contractor, installer, or building owner to comply with all applicable laws, ordinances, building codes, electrical codes, energy codes, fire and safety codes and requirements, roof warranties and adequate safety precautions. Installation of this product should be attempted only by individuals skilled in the use of the tools and equipment necessary for installation. Protect yourself and all persons and property during installation. If you have any doubt concerning your competence or expertise, consult a qualified expert before proceeding. Deviation from these instructions in any manner, including application and mounting, will result in a voided warranty.

Install at your own risk!



Solatube product installations may be dangerous and include the potential for death, personal injury and property damage. The hazardous conditions include but are not limited to the following:

- Solatube Daylighting Systems, Solar Star products, and Whole House Fan ventilation systems may have sharp edges. Always wear leather or canvas gloves while handling and installing products.
- Solatube product installations require climbing and working at dangerous heights, including on ladders, scaffolding, roofs and in attic spaces. Risk of death, personal injury and property damage may result from a fall, or from falling objects. Use extreme caution to minimize risk of accidental injury, including, but not limited to the following procedures:
 - Clear area below your work space of all people, animals and other items.
 - Avoid working on surfaces that are slippery or wet.
 - Use foot-wear with excellent traction.
 - Use only strong, well supported ladders.
 - Work only in calm dry weather.
 - When in the attic, ensure that your weight is supported at all times with structurally sound framing; drywall material is not designed to carry a person's weight.
- To reduce the risk of fire, electric shock, and personal injury, basic safety precautions should always be followed when using electric tools, including always wearing safety goggles or other suitable eye protection, and ensuring work area is clear of all electrical wires, gas pipes, water pipes, and other obstacles.
- When working in the attic or other dusty areas, use of a mask or respirator is recommended to avoid lung irritation. Attic spaces may be dark, confined, and subject to extreme temperatures. Beware of sharp protruding objects. Do not attempt installation without having someone within range of your voice or close enough to come to your aid if necessary.
- Solatube products are not designed to withstand the weight of a person, tools or other objects. Walking or placing objects on the system could cause personal injury and property damage. If the product is damaged, the structural capacity may be weakened; therefore the system should be repaired immediately. For safe installation and use, do not deviate from these installation instructions.



Whole House Fan Installation Tips

These instructions are a step-by-step guide for the installation of Solatube Whole House Fan ventilation products in the following conditions.

PLEASE READ AND SAVE THESE INSTRUCTIONS

WARNING

To Reduce The Risk Of Fire Or Electric Shock, Do Not Use This Fan With Any Solid-State Speed Control Device. Electrical Connections Should Only be Performed By A Licensed Electrician.

To Reduce The Risk Of Fire, Electric Shock, Or Injury To Persons, Observe The Following:

- Use this unit only in the manner intended by the manufacturer. If you have questions, please contact your Solatube International representative.
- Before servicing or cleaning unit, switch power off at service panel and lock the service disconnecting means to prevent power from being switched on accidentally. When the service disconnecting means cannot be locked, securely fasten a prominent warning device, such as a tag, to the service panel.

Caution

- For General Ventilation Use Only. Do Not Use To Exhaust Hazardous or Explosive Materials and Vapors.
- Installation work and electrical wiring must be done by qualified persons (s) in accordance with all applicable codes and standards, including fire rated construction.
- Sufficient air is needed for proper combustion and exhausting of gases through the flue (chimney) of fuel burning equipment to prevent back drafting. Follow the heating equipment manufacturer's guidelines and safety standards such as those published by the National Fire Protections Association (NFPA), and the American Society for Heating, Refrigeration and Air Conditioning Engineers (ASHRAE), and local code authorities.
- When cutting or drilling into wall or ceiling, do not damage electrical wiring and other hidden utilities.
- If this unit is to be installed over a tub or shower, it must be marked as appropriate for the application and be connected to a GFCI (Ground Fault Circuit Interrupter) Protection branch circuit.

For the most current Installation Instructions, please visit www.solatube.com/instructions

Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE

Overview

Locate Desired Placement of the Whole House Fan

NOTE: The attic must be large enough to accommodate the Whole House Fan in the chosen location. There must be a minimum vertical clearance of 30" from top of ceiling joist to roof rafter. Also, the attic must have accessible power close enough to be able to plug

in the fan or hard wire to existing electrical.

NOTE: Please ensure that there is adequate net free ventilation for the Solatube Whole House Fan. You will need one (1) square foot of net free vent area for every 750 CFM of fan capacity.

WARNING


Avoid backdrafting of combustion appliances (i.e. gas fired water heaters and gas fired furnaces) by ensuring adequate ventilation is available and properly maintained. It is recommended to test the ventilation system to ensure intake and outlet ventilation is properly balanced. In some cases, it may be necessary to increase the number of vents to achieve this. When installing ventilation systems into a garage, it is recommended to test the system to ensure backdrafting is not occurring regardless of the amount

of venting.




Mark Ceiling Locations for Damper Box Between Joists
In the attic, use a keyhole saw to make two holes in the dryw.

In the attic, use a keyhole saw to make two holes in the drywall against the edge of the joist. This will work as a guide for the template used in the next step. Ensure that one of the holes is used as the corner alignment and ensure the grill will be in the desired location on the ceiling.

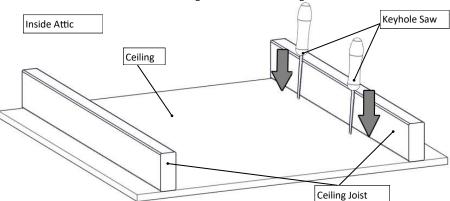


Create a Template
Place the Damper Box on the cardboard box and trace the outside edge onto the box. Next cut the template using a razor knife.


Do not include horizontal tabs.

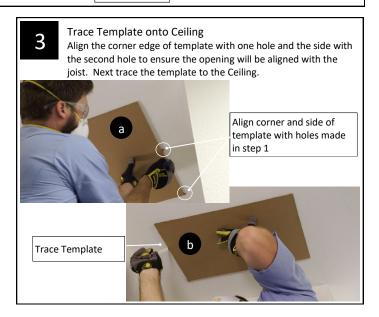


© 2020 Solatube International, Inc. Part No. 941572 v1.3

4

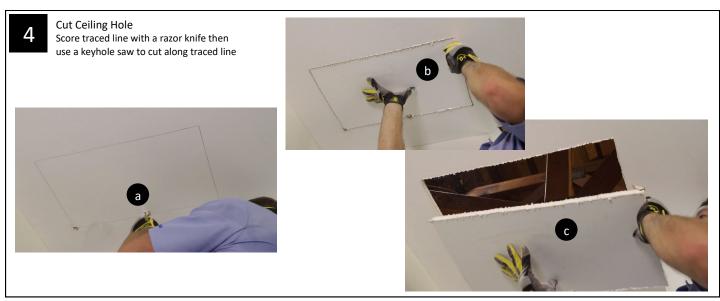


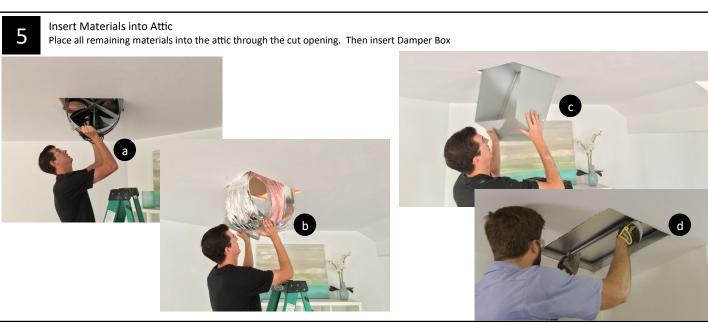


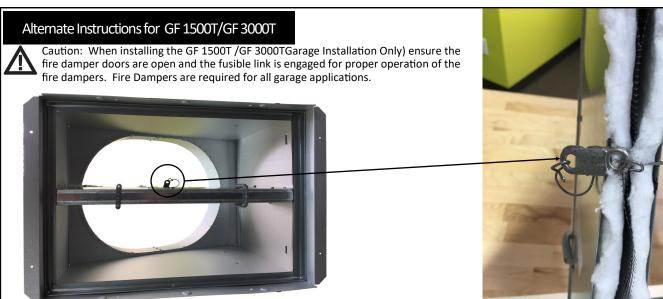


For the most current Installation Instructions, please visit www.solatube.com/instructions Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE



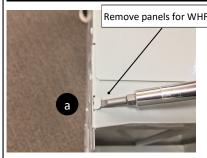


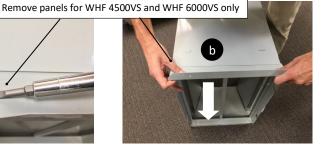

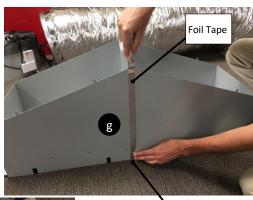


Tape Connected Damper Boxes



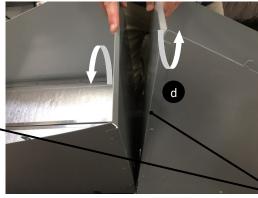

Connect Damper Boxes with tabs on back wall of each Damper Box. Carefully hook each tab to secure



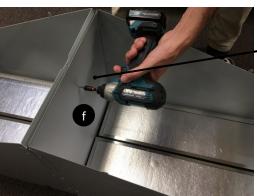

Secure Damper Boxes together with one (1) 5/8 in. Hex Head screw

Ensure screw is placed high in the Damper Box to allow the damper doors to open properly

Alternate Continued

Create a Template

Place the Damper Boxes on the cardboard box and trace the outside edge onto the box. Next cut the template using a razor knife.




Trace outside edge of Damper Box and cut with razor knife


Trace Template onto Ceiling Follow the same process as step 3 to trace larger opening




For the most current Installation Instructions, please visit www.solatube.com/instructions Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE

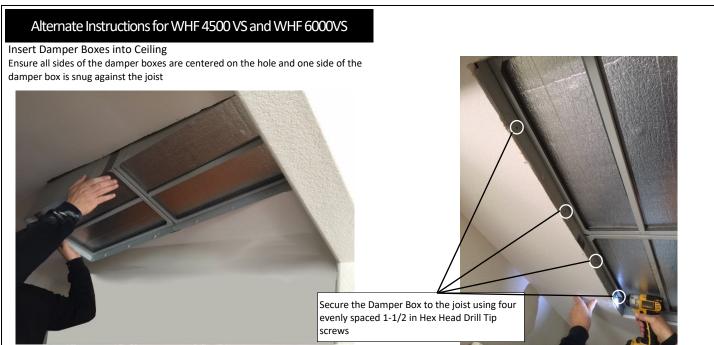



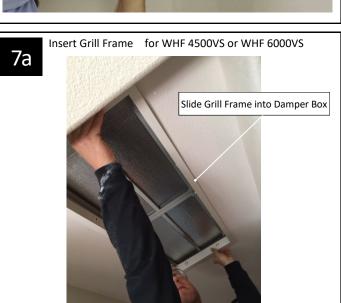




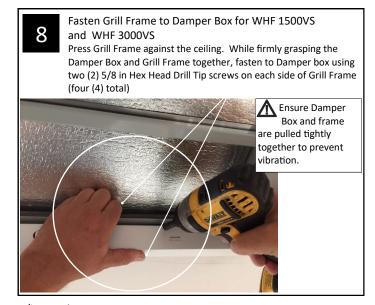

For the most current Installation Instructions, please visit www.solatube.com/instructions Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE






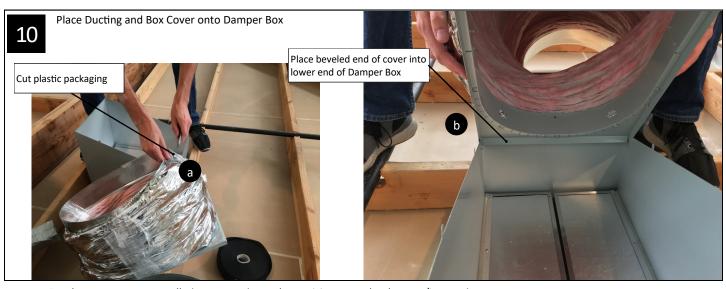

For the most current Installation Instructions, please visit www.solatube.com/instructions

Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE

 













Tape seams around cover and Damper Box




For the most current Installation Instructions, please visit www.solatube.com/instructions
Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE

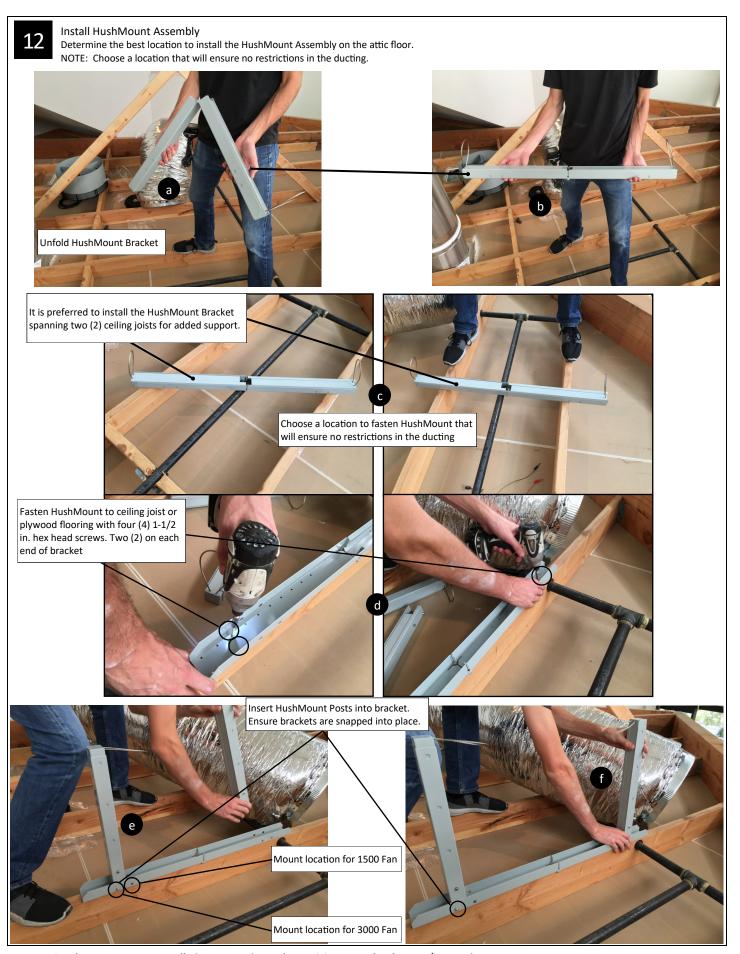

For the most current Installation Instructions, please visit www.solatube.com/instructions
Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE

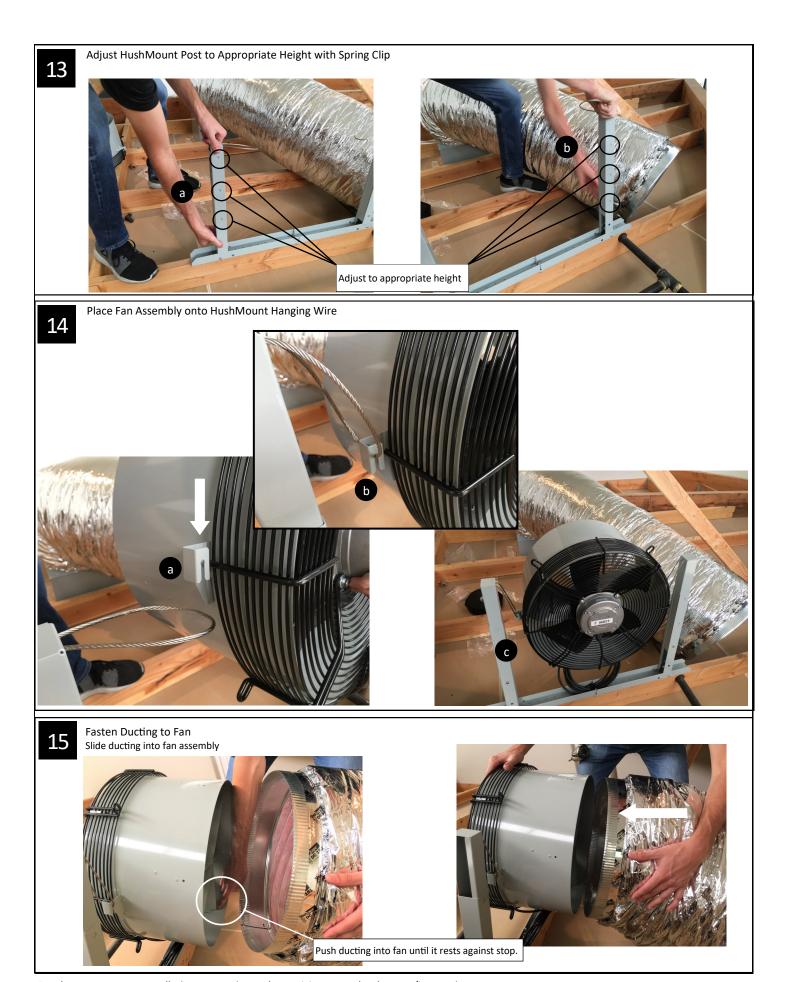

For the most current Installation Instructions, please visit www.solatube.com/instructions Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE

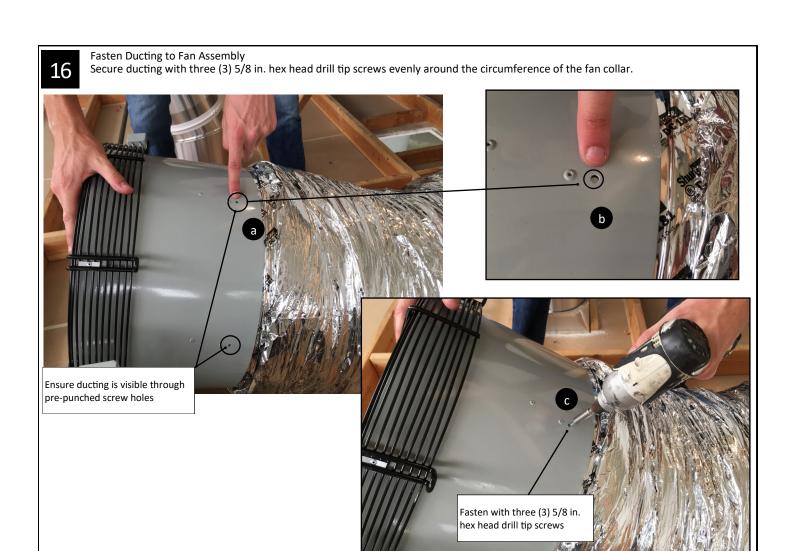


Install Strapping

12

Use a custom length of strapping material to install a center strap on the ducting to keep the ducting in an optimum curve and maximizing air flow. Fasten each side of strapping with 1-1/2 in. Hex Head Drill Tip Screws and Washers.




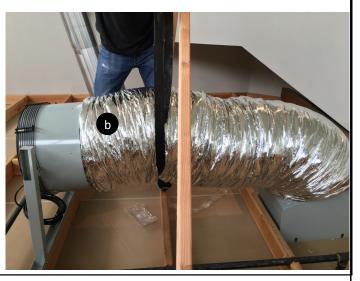

For the most current Installation Instructions, please visit www.solatube.com/instructions
Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE

Plug Fan Cord into Outlet



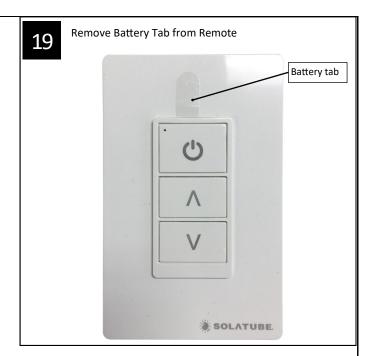


20

The fan will be placed into pairing mode when plug is inserted into outlet.

Once fan is plugged into outlet, press and hold Power button on remote until fan control beeps. Remote is now paired with fan.

Test remote by pressing Power button. Please Note: Fan will always start in highest speed.

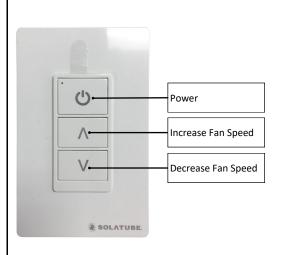



21

Pairing A New Remote

- 1. Press and release Pair/Test button on fan motor until green light flashes.
- 2. Press and hold Power button on remote until fan control beeps.
- 3. Remote is now paired with fan.

Remove A Remote From Pairing

 
- 1. Press and hold Pair/Test button on fan motor until motor beeps rapidly 4 times.
- 2. Remote is now removed from motor memory.




Install Remote to Wall (Optional)

The remote control can be left on a counter or table, or can be fastened to a wall.








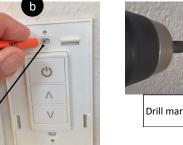

Drill marked fastener locations

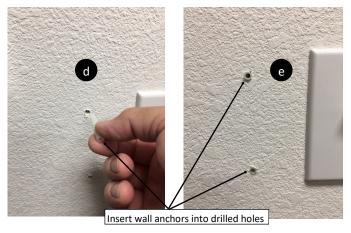












Replace Remote Battery 23 Use 2032 coin cell battery

14



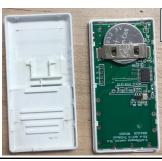

Remove back cover from remote to replace battery




For the most current Installation Instructions, please visit www.solatube.com/instructions Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE

Garage Fan Instructions

Note: The following instructions should only be performed by a licensed electrician. Please follow all local municipal and building code requirements prior to making electrical connections.



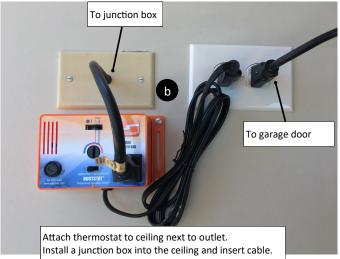

Install junction box in attic just above outlet. Connect cable from thermostat to garage fan. Secure cable trough junction box and secure to framing member.


The Garage Fan models GF1500T and GF3000T come with the outlet cord detached.



Insert garage fan outlet cord through junction box




Continue to feed cord through junction box

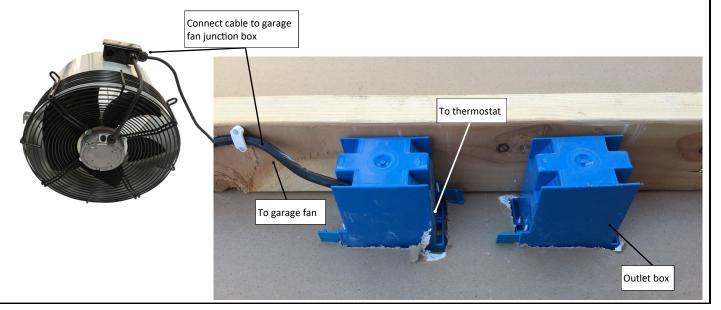


For the most current Installation Instructions, please visit www.solatube.com/instructions
Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE

Garage Fan Instructions


The Garage Fan models GF1500T and GF3000T come with the outlet cord detached. **WARNING:** To avoid risk of shock, make wire connections prior to plugging into outlet.

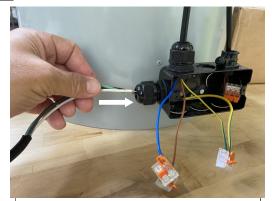


Insert outlet cord into junction box through provided strain relief

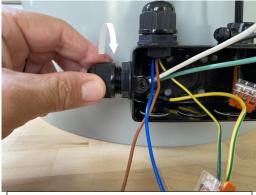

Secure outlet cord to junction box by tightening strain relief

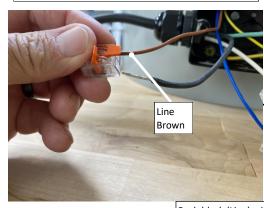

Push black (Line) wire into quick connect terminal block and fasten. Ensure proper connection by firmly pulling on black wire.

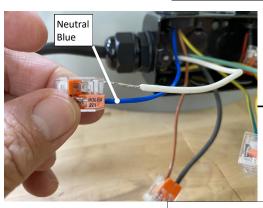



Push white (Neutral) wire into quick connect terminal block and fasten. Ensure proper connection by firmly pulling on white wire.



Push green (Ground) wire into quick connect terminal block and fasten. Ensure proper connection by firmly pulling on green wire.



For the most current Installation Instructions, please visit www.solatube.com/instructions
Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE


16

Garage Fan Instructions


Note: The following instructions should only be performed by a licensed electrician. Please follow all local municipal and building code requirements prior to making electrical connections.




These wires are left alone. Do not make any wire connections to this terminal.

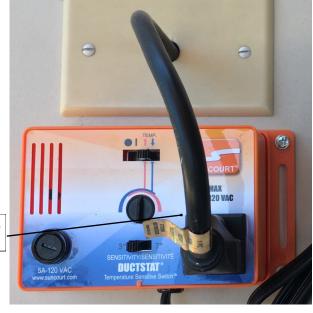

Plug outlet cord into thermostat once wire connections are completed.

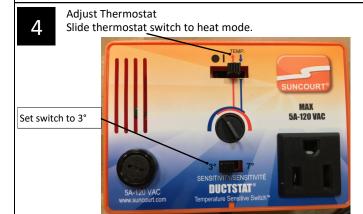

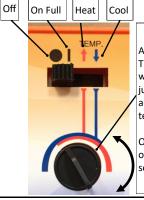

Adjust dial to desired setting. Turn dial clockwise until it reaches stop. Fan will turn on. Then turn dial counterclockwise just until fan turns off. This may need to be adjusted several times at initial set up when temperature changes.

Once set, the garage fan will automatically turn on when temperature reaches thermostat setting.

