


Solatube[®] HSE Fixed Skylight

Installation Instructions

Parts List		Quantity
1	HSE Skylight*	(1)
	Fasteners	
	a. Flashing Screws - #10 X 2 in (51 mm) (Order Separately)	(8)
2	b. Flashing Screws - #10 X 3 in (76 mm) (Order Separately)	(8)
	c. Rubber Foam Self-Stick Insulating Weather Seal 3/4" Wide x 7/16" Thick (Not Provided)	
	d. Snap Spacer (Order Separately)	

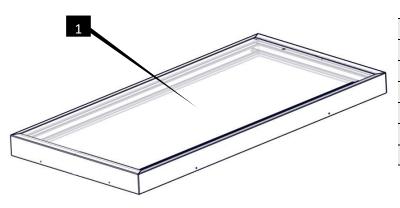

2a

Required Tools:

Hammer Flat Bar Utility Knife Tape Measure Screw Gun with Phillips Head Glass Suction Cup Required Safety Equipment

* High Velocity Hurricane Zones: This product is not rated for High Velocity Hurricane Zones.






Scan The Code And Watch Our Installation Video



For the most current Installation Instructions, please visit www.solatube.com/instructions Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE




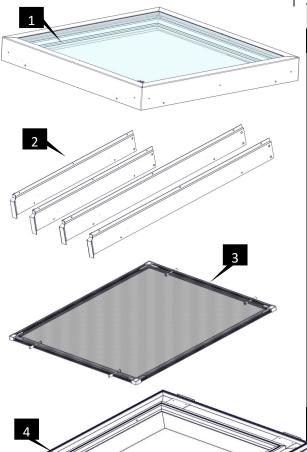

Solatube[®] HSE Operable Skylight

Installation Instructions

Parts List		
1	HSE Fixed Skylight Top*	(1)
2	Operable Flash	(4)
3	Skylight Screen	(1)
4	Extrusion Skylight Operable	(1)
5	Solar Panel Assembly with Rain Sensor (Rain Sensor Not Shown)	(1)
6	Fasteners	
	a. Flashing Screws - #10 X 2 in (51 mm) (Order Separately)	(8)
	b. Flashing Screws - #10 X 3 in (76 mm) (Order Separately)	(8)
	c. Rivet, Stainless Steel 1/8" X 5/16"	(12)
	d. Screw, Stainless Steel #8 X 1/2" Self-Tapping (Black)	(24)
	e. Chain Connector Assembly	(1)
	f. Clevis Pin	(1)
	g. Snap Spacer (Order Separately)	
7	Skylight Remote Control	(1)
8	b. Rubber Foam Self-Stick Insulating Weather Seal 3/4" Wide x 7/16" Thick (Not Provided)	
	Required Tools:	
	Rivet Gun	
	Screw Gun with Phillips Head	
	Glass Suction Cup	
	Drill Bit	
	Utility Knife	
	Tape Measure	
	Flat Bar	
Z	Hammer	
S.	Required Safety Equipment	
	* High Velocity Hurricane Zones: This product is not rated Velocity Hurricane Zones.	for High

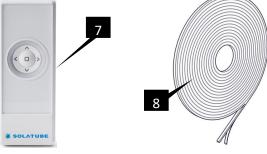

For the most current Installation Instructions, please visit www.solatube.com/instructions Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE

Do not proceed with the installation until you have read the entire instructions, including these warnings. (Use of materials or methods not authorized by Solatube International will result in an invalid warranty.)

Solatube International, Inc. (seller) assumes no responsibility or obligation whatsoever for the failure of an architect, contractor, installer, or building owner to comply with all applicable laws, ordinances, building codes, electrical codes, energy codes, fire and safety codes and requirements, roof warranties and adequate safety precautions. Installation of this product should be attempted only by individuals skilled in the use of the tools and equipment necessary for installation. Protect yourself and all persons and property during installation. If you have any doubt concerning your competence or expertise, consult a qualified expert before proceeding.



Install at your own risk!


WARNING

Solatube product installations may be dangerous and include the potential for death, personal injury and property damage. The hazardous conditions include but are not limited to the following:

- Use extreme caution when working around the roof opening to prevent falling and personal injury.
- The weight of skylights varies, therefore transportation and installation of the skylight to the installation location should be conducted with as many people as necessary to avoid accidents. Ensure proper lifting techniques are used at all times.
- Solatube products may have sharp edges. Always wear leather or canvas gloves while handling and installing products.
- Solatube product installations require climbing and working at dangerous heights, including on ladders, scaffolding, roofs and in attic spaces. Risk of death, personal injury and property damage may result from a fall, or from falling objects. Use extreme caution to minimize risk of accidental injury, including, but not limited to the following procedures:
 - Clear area below your work space of all people, animals and other items.
 - Avoid working on surfaces that are slippery or wet.
 - Use foot-wear with excellent traction.
 - Use only strong, well supported ladders.
 - Work only in calm dry weather.
 - If attic work is necessary, ensure that your weight is supported at all times with structurally sound framing; drywall material is not designed to carry a person's weight.
- To reduce the risk of fire, electric shock, and personal injury, basic safety precautions should always be followed when using electric tools, including always wearing safety goggles or other suitable eye protection, and ensuring work area is clear of all electrical wires, gas pipes, water pipes, and other obstacles.
- When working in the attic or other dusty areas, use of a mask or respirator is recommended to avoid lung irritation. Attic spaces may be dark, confined, and subject to extreme temperatures. Beware of sharp protruding objects. Do not attempt installation without having someone within range of your voice or close enough to come to your aid if necessary.
- Solatube products are not designed to withstand the weight of a person, tools or other objects. Walking or placing objects on the system could cause personal injury and property damage. If the product is damaged, the structural capacity may be weakened; therefore the system should be repaired immediately. For safe installation and use, do not deviate from these installation instructions.
- Please note that interior surfaces and finishes in older homes may have been painted with lead-based paint. Removal of the skylight could disrupt the paint. Use proper precautions to minimize the exposure of dust and debris when removing and installing skylights. For more information of proper removal of lead paint please visit www.epa.gov/lead.
- Ensure roof curb and water proofing is in good condition before installing skylights. If curb and or water proofing is compromised, it will be necessary to repair or replace. All roof work and repairs should be conducted by individuals skilled in roofing practices or a licensed roofer.


Solatube HSE Fixed Skylight Installation Instructions The following steps are for installation of a Solatube HSE Fixed Skylight.


See page 8 for Solatube HSE Operable Skylight Installation Instruction.

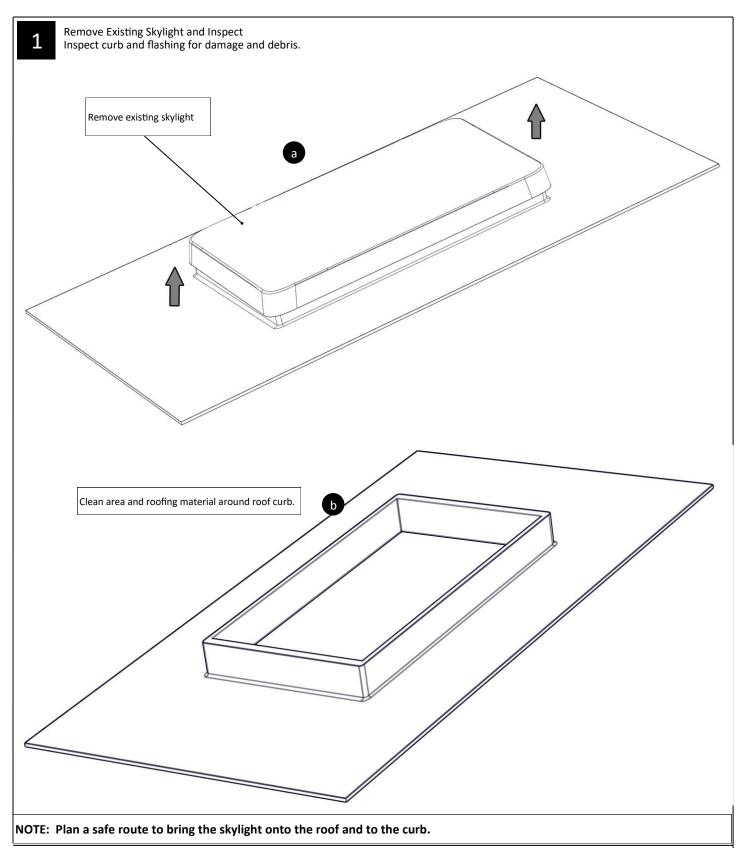




For the most current Installation Instructions, please visit www.solatube.com/instructions Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE

 

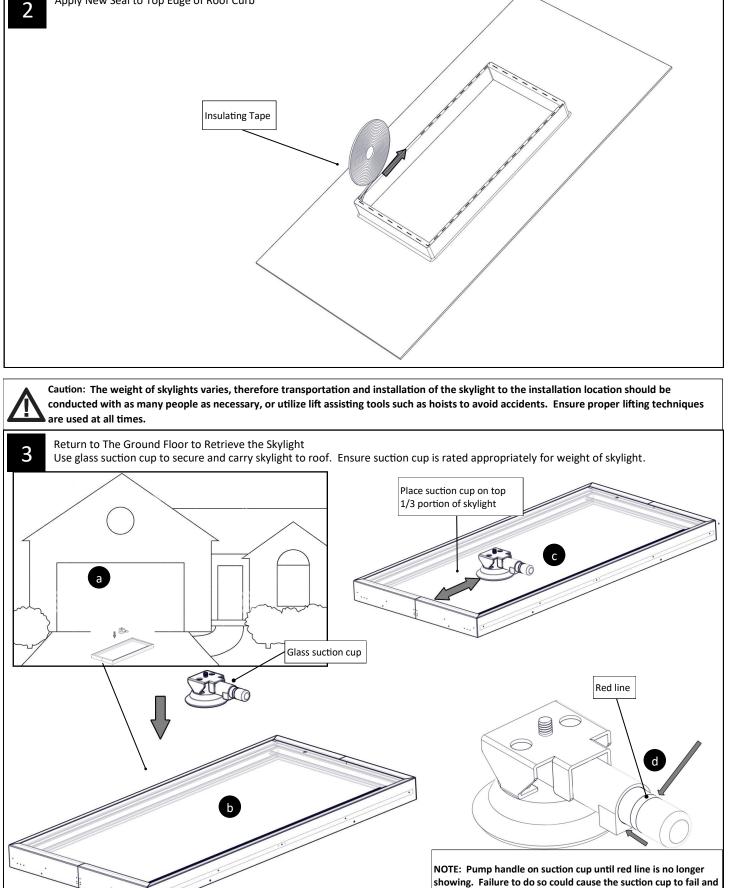



For the most current Installation Instructions, please visit www.solatube.com/instructions Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE

release from the skylight.

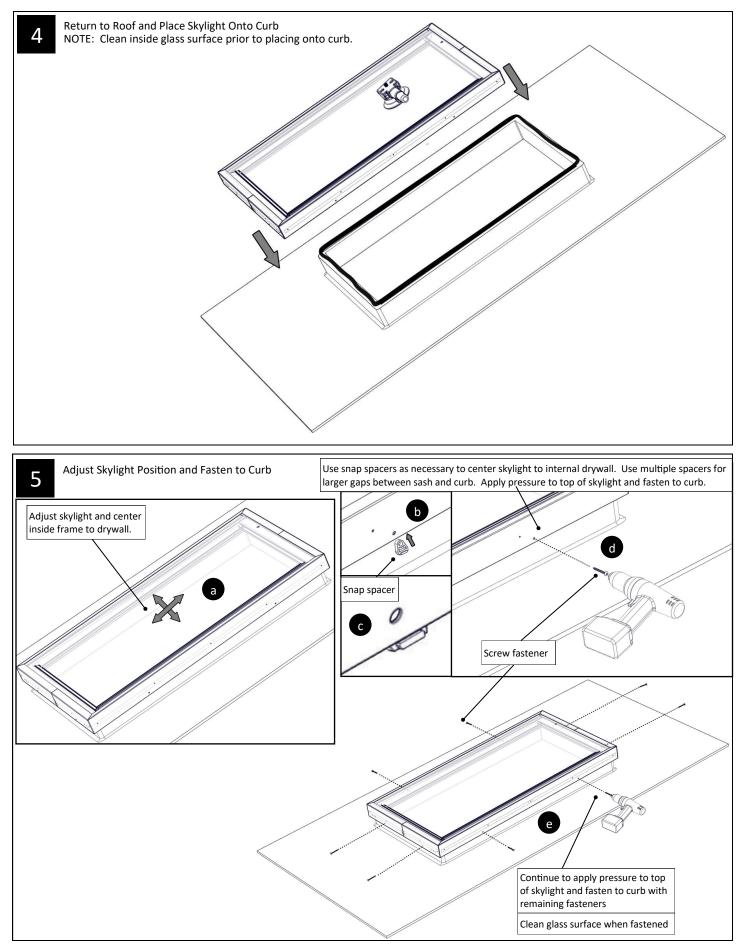


For the most current Installation Instructions, please visit www.solatube.com/instructions Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE

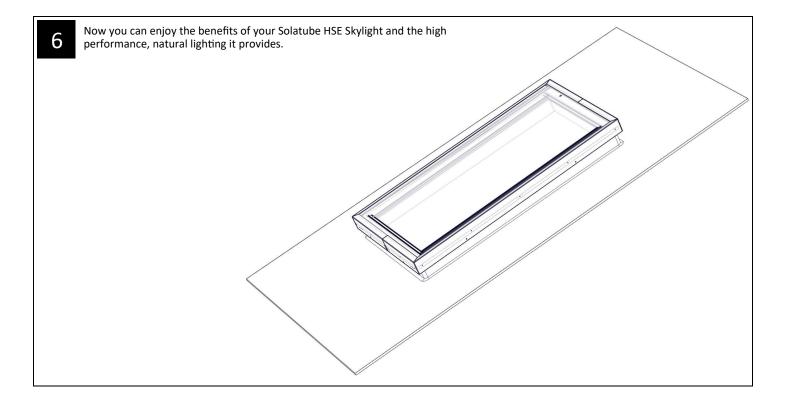

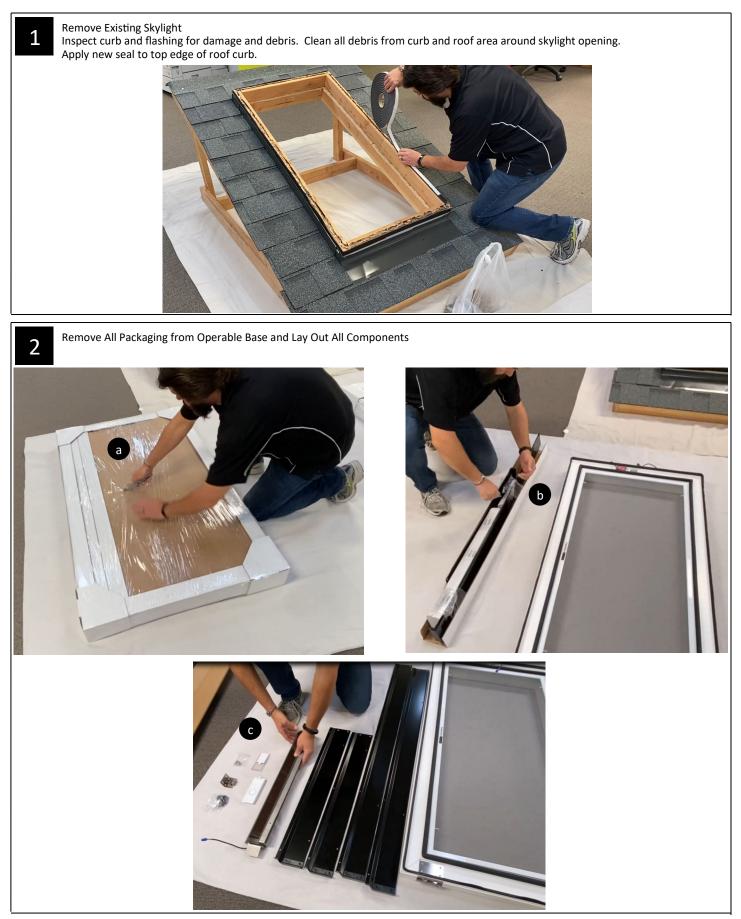


For the most current Installation Instructions, please visit www.solatube.com/instructions Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE

Check Operation of Solar Motor Prior to Assembly

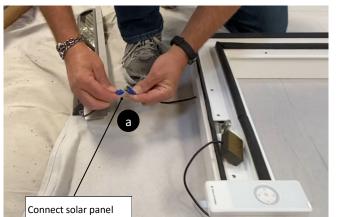


cable to motor cable

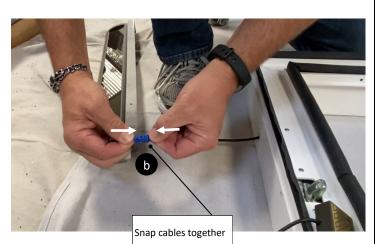




Press the "UP" button to lift the chain

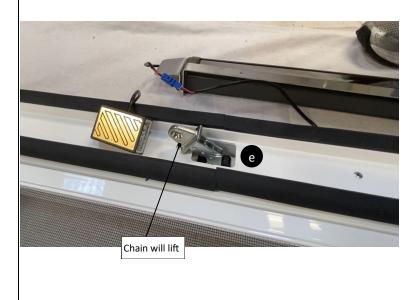




Press the "DOWN" button to bring the chain back to the home position. If motor does not operate, see pairing section on page 21.

 NOTE: If motor does not operate see pairing instruction on page 21.





Insert one side of sash into the other

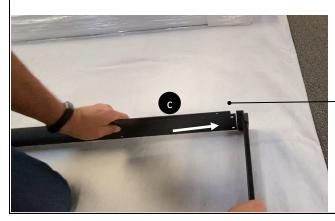







For the most current Installation Instructions, please visit www.solatube.com/instructions Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE

Fasten PVC Base to Sash Frame

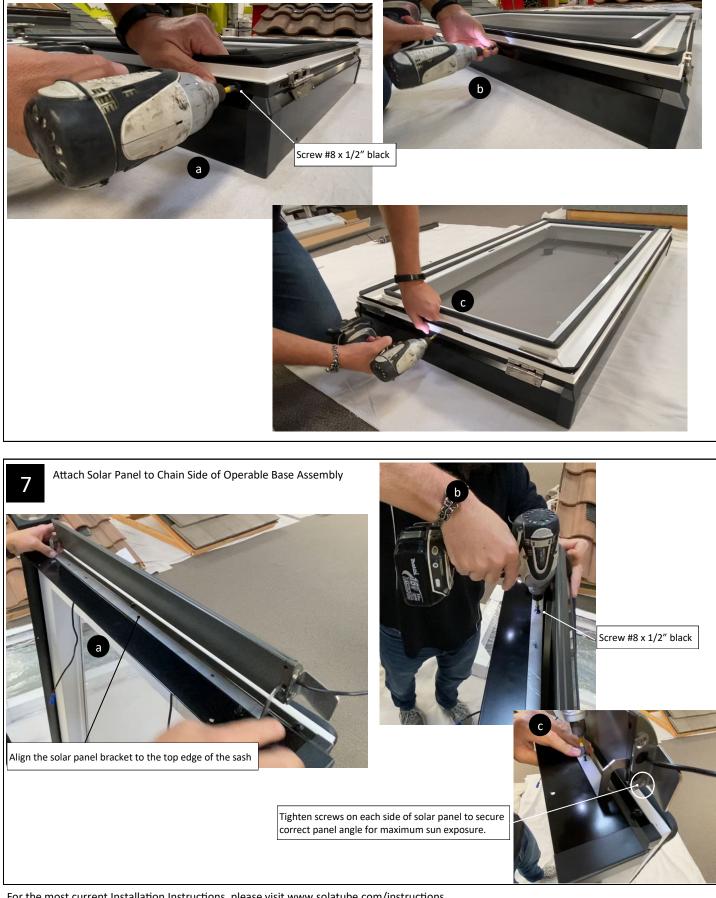



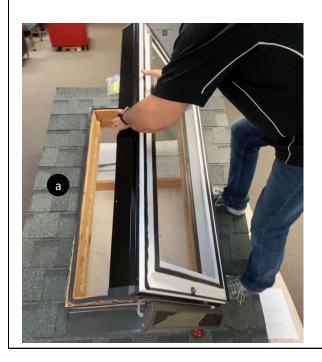




8

Fasten Operable Base Assembly to Curb Use snap spacers to center the operable base assembly to the internal drywall. Use multiple spacers for larger gaps between sash and curb.



Snap spacer

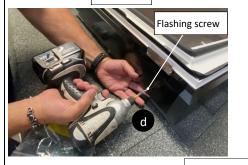



Press down on top of operable base assembly and fasten to curb. Continue fastening all sides of operable base assembly to curb.




Insert snap spacer(s) between fastening hole and curb




Leave base (lower end with solar panel) for next step.

For the most current Installation Instructions, please visit www.solatube.com/instructions Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE

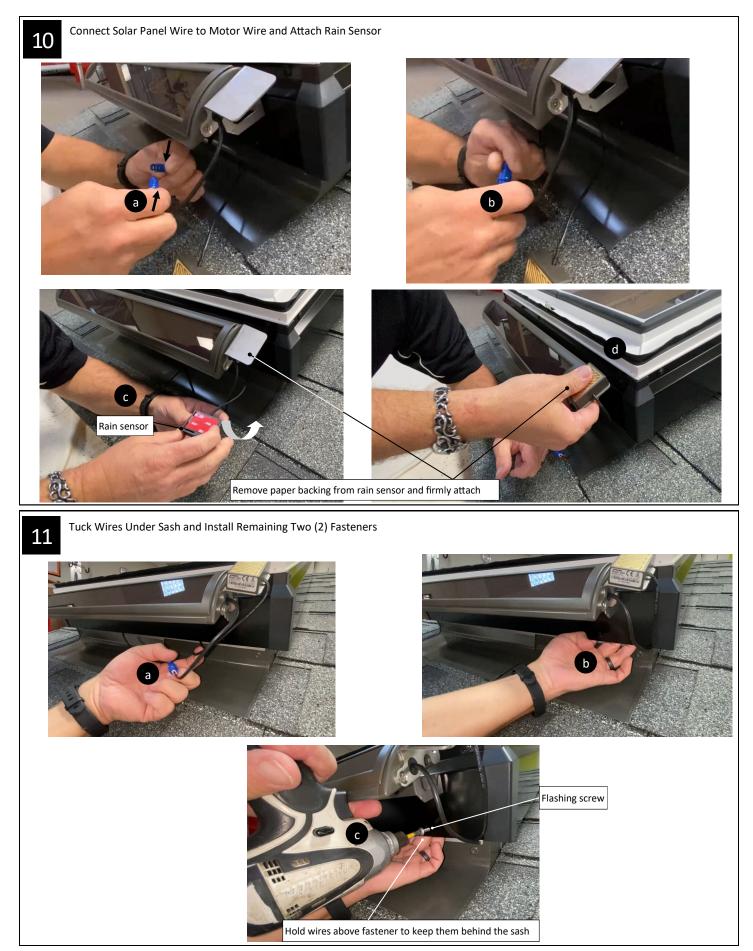



For the most current Installation Instructions, please visit www.solatube.com/instructions Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE

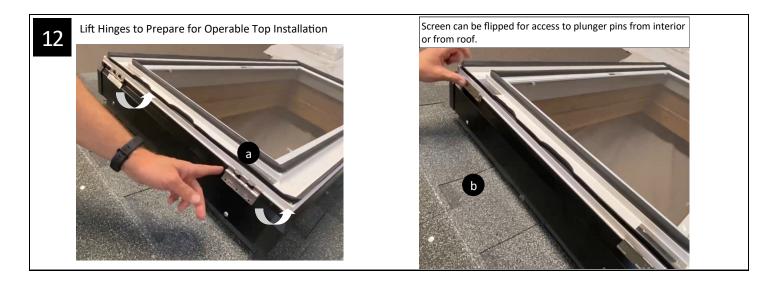


Return to Ground Floor and Remove all Packaging from Fixed Skylight Portion



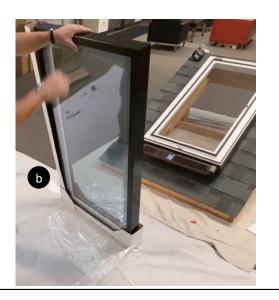


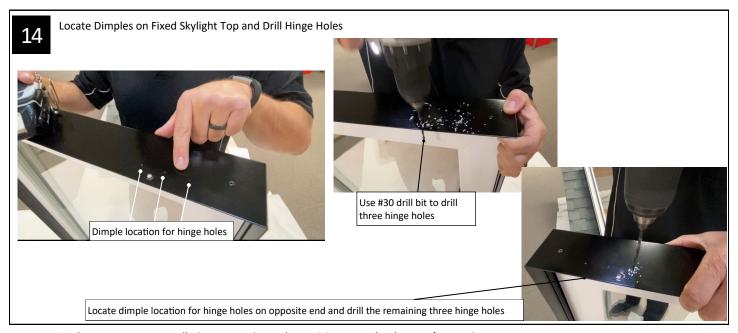


14

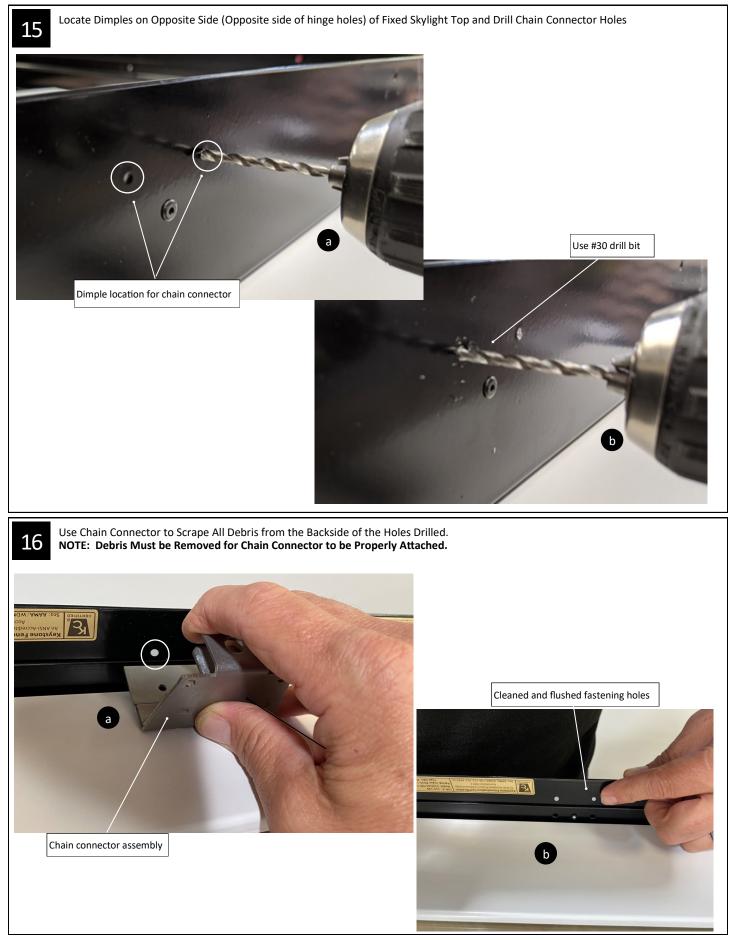

For the most current Installation Instructions, please visit www.solatube.com/instructions Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE

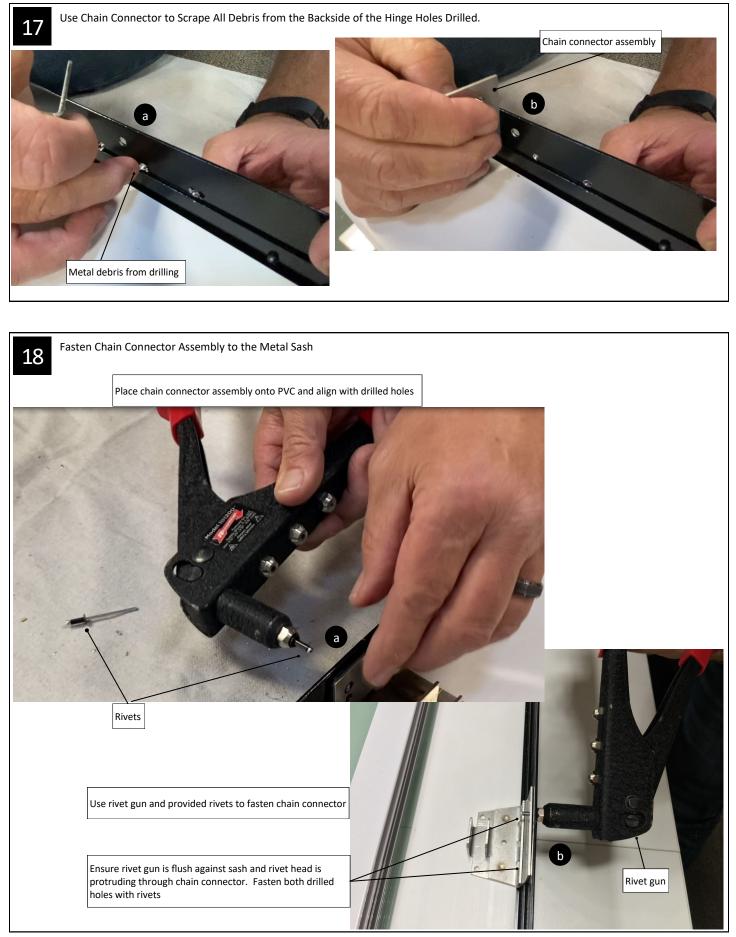


For the most current Installation Instructions, please visit www.solatube.com/instructions Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE

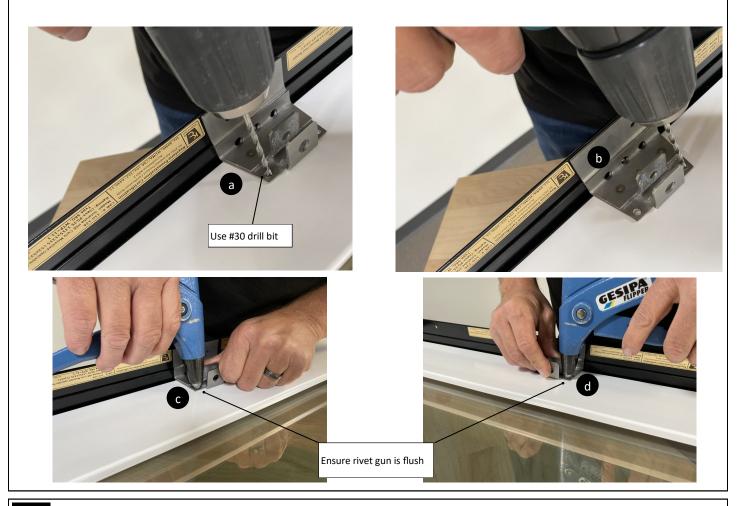

20

Clean the Inside Glass and PVC Frame Remove all debris

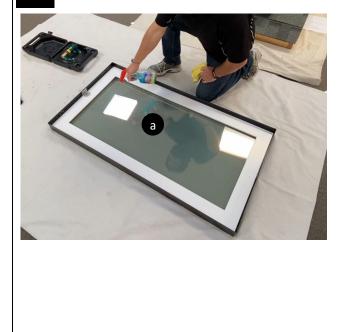







Fasten Opposite Hinge to Sash Ensure sash and hinge are flush with no gaps before fastening.




23

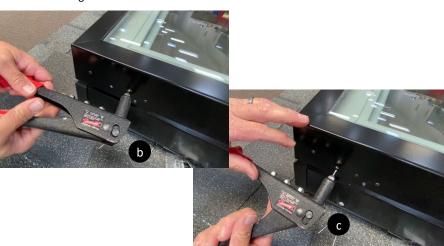

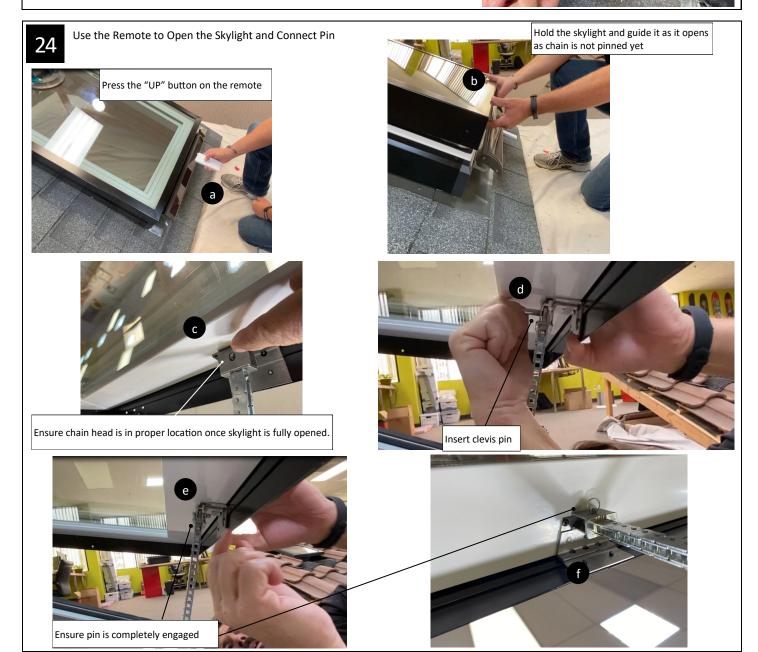

For the most current Installation Instructions, please visit www.solatube.com/instructions Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE


Part No. 952620 v1.2

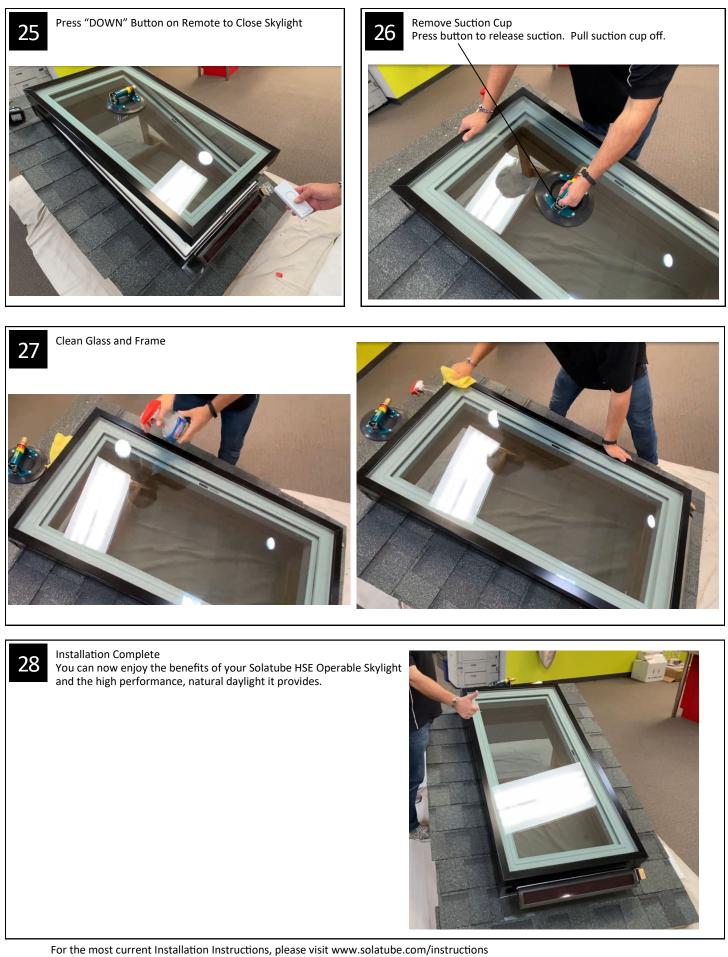

Optional Step These instructions are intended to be used to pair multiple Solatube HSE Operable Skylights to one remote control, or pair a new remote.


Ensure the Motor and Solar Panel for the Desired Skylight to Pair are Connected.



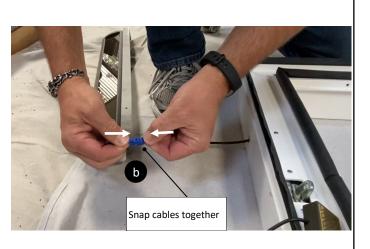

2

Remove Motor Cover, Pairing Chip. Remove Battery Protector from Remote

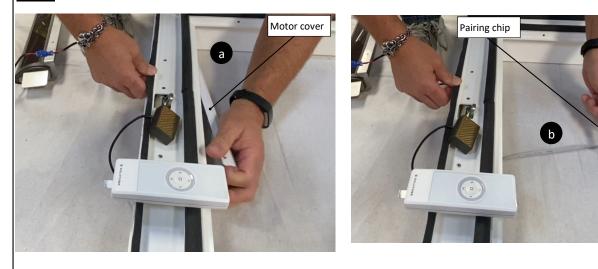



For the most current Installation Instructions, please visit www.solatube.com/instructions Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE


Optional Step—Continued These instructions are intended to be used to pair multiple Solatube HSE Operable Skylights to one remote control, or pair a new remote.

Ensure the Motor and Solar Panel for the Desired Skylight to Pair are Connected.






е

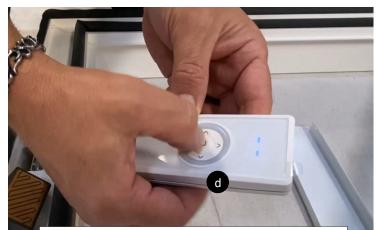

Next, press the "CENTER" button to start the 12 second countdown



Once paired, the green light and remote display light will turn off to indicate successful pairing.

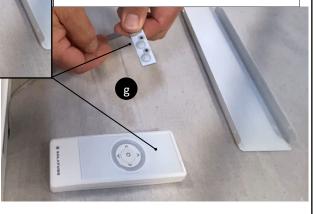

```
Set remote down and press the "P" button on the pairing chip to pair
remote with motor during the 12 second countdown.
```


For the most current Installation Instructions, please visit www.solatube.com/instructions Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE


Optional Step—Continued These instructions are intended to be used to pair multiple Solatube HSE Operable Skylights to one re-mote control or pair a new remote.

4

5


Adjust Chain if Necessary for Chain to Function Properly

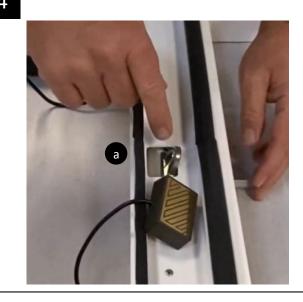


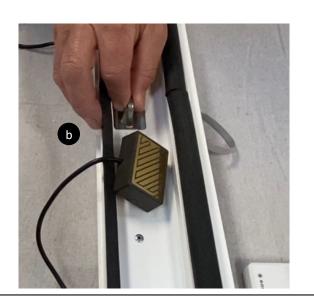

Test for Successful Pairing



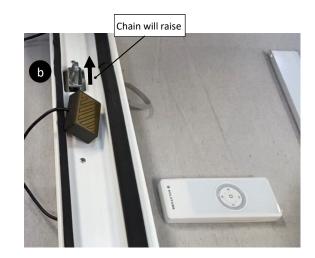

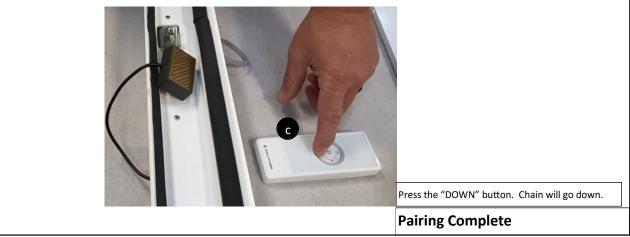

For further Remote Control instructions please see the Solatube Remote Control User Manual.

Notes



Solatube International, Inc., 2210 Oak Ridge Way, Vista CA 92081-8341 Phone (800) 966-7652 • Fax (760) 599-5181 **www.solatube.com** Part No. 952620 v1.2