

Whole House Fan

WHF 1500, GF 1500, WHF 3000 Installation Instructions




Parts List * Quantity		
1	Fan Assembly (WHF 3000 Shown)	(1)
2	Damper Box Cover and Insulated Ducting Assembly	(1)
3	Damper Box	(1)
4	Fan Grill	(1)
5	HushMount [™] Assembly	(1)
	Fastener Kit	
6	a. Screw #8 X 1-1/2 (38 mm) Hex Head Drill Tip	(12)
b	b. Screw #8 X 5/8 in (16 mm) Hex Head Drill Tip	(14)
	c. Washer	(2)
7	Nylon Strapping (Sold Separately) (Not Shown)	
8	Foil Tape (Sold Separately) (Not Shown)	

Required Tools:

Keyhole Saw
Screw Gun with 1/4 in Nut Driver (Hex Head)
Tape Measure
Utility Knife
Screwdriver with Phillips Head
Pencil
Required Safety Equipment



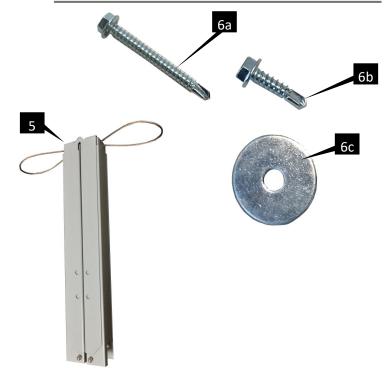



For the most current Installation Instructions, please visit www.solatube.com/instructions Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE



Whole House Fan


WHF 4500, WHF 6000 Installation Instructions




Parts List * Quantity		
1	Fan Assembly (WHF 6000 Shown)	(2)
2	Damper Box Cover and Insulated Ducting Assembly	(2)
3	Damper Box	(2)
4	Fan Grill	(1)
5	HushMount [™] Assembly	(2)
	Fastener Kit	
6	a. Screw #8 X 1-1/2 in (38 mm) Hex Head Drill Tip	(24)
0	b. Screw #8 X 5/8 in (16 mm) Hex Head Drill Tip	(28)
	c. Washer	(4)
7	Nylon Strapping (Sold Separately) (Not Shown)	
8	Foil Tape (Sold Separately) (Not Shown)	


Required Tools:

Keyhole Saw
Screw Gun with 1/4 in Nut Driver (Hex Head)
Tape Measure
Utility Knife
Screwdriver with Phillips Head
Pencil
Required Safety Equipment

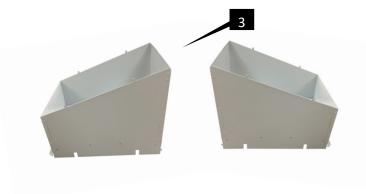

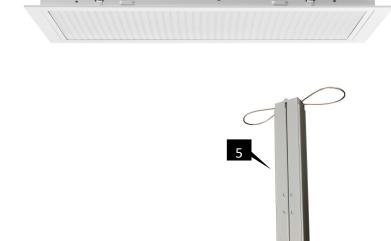

2

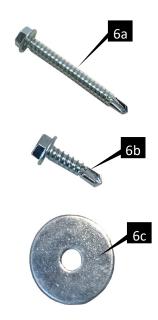

For the most current Installation Instructions, please visit www.solatube.com/instructions
Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE





Do not proceed with the installation until you have read the entire instructions, including these warnings. (Use of materials or methods not authorized by Solatube International will result in an invalid warranty.)

Solatube International, Inc. (seller) assumes no responsibility or obligation whatsoever for the failure of an architect, contractor, installer, or building owner to comply with all applicable laws, ordinances, building codes, electrical codes, energy codes, fire and safety codes and requirements, roof warranties and adequate safety precautions. Installation of this product should be attempted only by individuals skilled in the use of the tools and equipment necessary for installation. Protect yourself and all persons and property during installation. If you have any doubt concerning your competence or expertise, consult a qualified expert before proceeding. Deviation from these instructions in any manner, including application and mounting, will result in a voided warranty.

Install at your own risk!



Solatube product installations may be dangerous and include the potential for death, personal injury and property damage. The hazardous conditions include but are not limited to the following:

- Solatube Daylighting Systems, Solar Star products, and Whole House Fan ventilation systems may have sharp edges. Always wear leather or canvas gloves while handling and installing products.
- Solatube product installations require climbing and working at dangerous heights, including on ladders, scaffolding, roofs and in attic spaces. Risk of death, personal injury and property damage may result from a fall, or from falling objects. Use extreme caution to minimize risk of accidental injury, including, but not limited to the following procedures:
 - Clear area below your work space of all people, animals and other items.
 - Avoid working on surfaces that are slippery or wet.
 - Use foot-wear with excellent traction.
 - Use only strong, well supported ladders.
 - Work only in calm dry weather.
 - When in the attic, ensure that your weight is supported at all times with structurally sound framing; drywall material is not designed to carry a person's weight.
- To reduce the risk of fire, electric shock, and personal injury, basic safety precautions should always be followed when using electric tools, including always wearing safety goggles or other suitable eye protection, and ensuring work area is clear of all electrical wires, gas pipes, water pipes, and other obstacles
- When working in the attic or other dusty areas, use of a mask or respirator is recommended to avoid lung irritation. Attic spaces may be dark, confined, and subject to extreme temperatures. Beware of sharp protruding objects. Do not attempt installation without having someone within range of your voice or close enough to come to your aid if necessary.
- Solatube products are not designed to withstand the weight of a person, tools or other objects. Walking or placing objects on the system could cause personal injury and property damage. If the product is damaged, the structural capacity may be weakened; therefore the system should be repaired immediately. For safe installation and use, do not deviate from these installation instructions.



Whole House Fan Installation Tips

These instructions are a step-by-step guide for the installation of Solatube Whole House Fan ventilation products in the following conditions.

PLEASE READ AND SAVE THESE INSTRUCTIONS

WARNING

To Reduce The Risk Of Fire Or Electric Shock, Do Not Use This Fan With Any Solid-State Speed Control Device. Electrical Connections Should Only be Performed By A Licensed Electrician.

To Reduce The Risk Of Fire, Electric Shock, Or Injury To Persons, Observe The Following:

- Use this unit only in the manner intended by the manufacturer. If you have questions, please contact your Solatube International representative.
- Before servicing or cleaning unit, switch power off at service panel and lock the service disconnecting means to prevent power from being switched on accidentally. When the service disconnecting means cannot be locked, securely fasten a prominent warning device, such as a tag, to the service panel.

Caution

- For General Ventilation Use Only. Do Not Use To Exhaust Hazardous or Explosive Materials and Vapors.
- Installation work and electrical wiring must be done by qualified persons (s) in accordance with all applicable codes and standards, including fire rated construction.
- Sufficient air is needed for proper combustion and exhausting of gases through the flue (chimney) of fuel burning equipment to prevent back drafting. Follow the heating equipment manufacturer's guidelines and safety standards such as those published by the National Fire Protections Association (NFPA), and the American Society for Heating, Refrigeration and Air Conditioning Engineers (ASHRAE), and local code authorities.
- When cutting or drilling into wall or ceiling, do not damage electrical wiring and other hidden utilities.
- If this unit is to be installed over a tub or shower, it must be marked as appropriate for the application and be connected to a GFCI (Ground Fault Circuit Interrupter) Protection branch circuit.

For the most current Installation Instructions, please visit www.solatube.com/instructions

Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE

Overview

Locate Desired Placement of the Whole House Fan

NOTE: The attic must be large enough to accommodate the Whole House Fan in the chosen location. There must be a minimum vertical clearance of 30" from top of ceiling joist to roof rafter. Also, the attic must have accessible power close enough to be able to plug

in the fan or hard wire to existing electrical.

NOTE: Please ensure that there is adequate net free ventilation for the Solatube Whole House Fan. You will need one (1) square foot of net free vent area for every 750 CFM of fan capacity.

WARNING


Avoid backdrafting of combustion appliances (i.e. gas fired water heaters and gas fired furnaces) by ensuring adequate ventilation is available and properly maintained. It is recommended to test the ventilation system to ensure intake and outlet ventilation is properly balanced. In some cases, it may be necessary to increase the number of vents to achieve this. When installing ventilation systems into a garage, it is recommended to test the system to ensure backdrafting is not occurring regardless of the amount


of venting.




Mark Ceiling Locations for Damper Box Between Joists
In the attic, use a keyhole saw to make two holes in the dryw.


In the attic, use a keyhole saw to make two holes in the drywall against the edge of the joist. This will work as a guide for the template used in the next step. Ensure that one of the holes is used as the corner alignment and ensure the grill will be in the desired location on the ceiling.

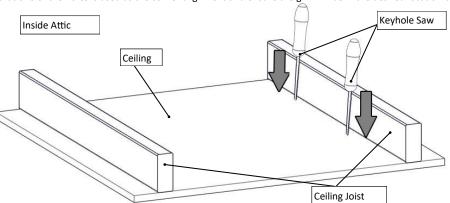


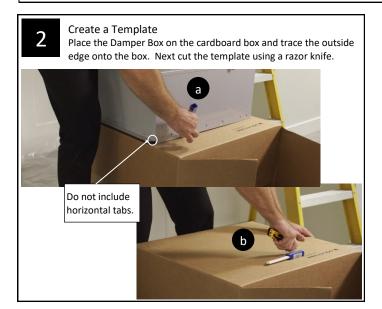


4

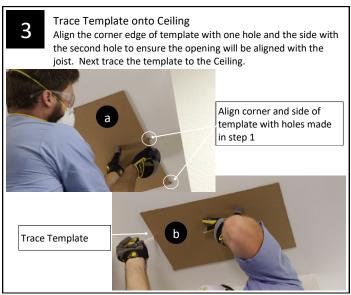


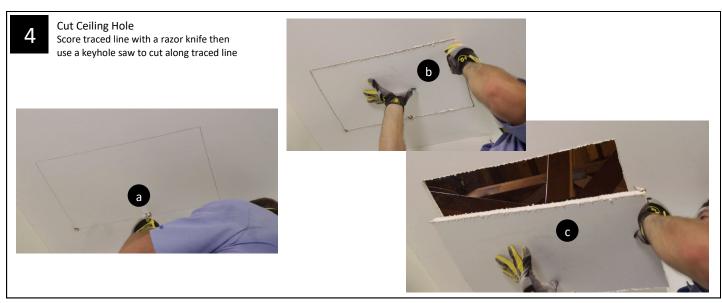

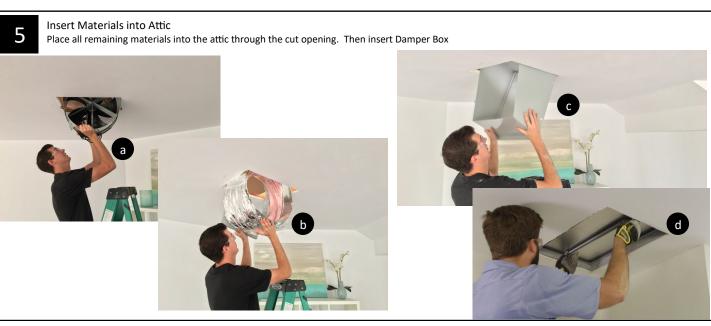


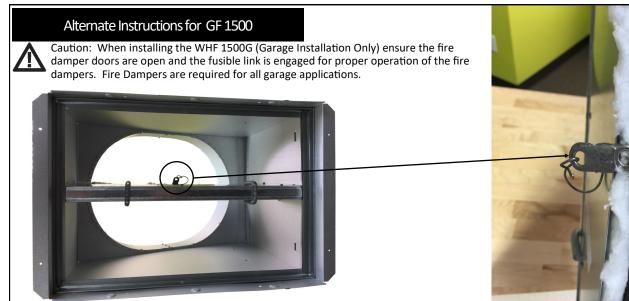


For the most current Installation Instructions, please visit www.solatube.com/instructions Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE



Assemble Damper Boxes

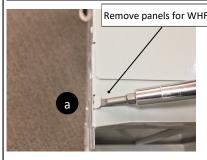

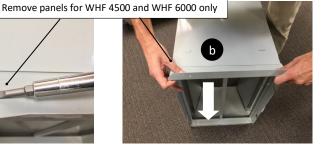




Tape Connected Damper Boxes



Connect Damper Boxes with tabs on back wall of each Damper Box. Carefully hook each tab to secure



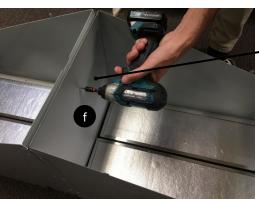


Secure Damper Boxes together with one (1) 5/8 in. Hex Head screw

Ensure screw is placed high in the Damper Box to allow the damper doors to open properly

Alternate Continued


Create a Template

Place the Damper Boxes on the cardboard box and trace the outside edge onto the box. Next cut the template using a razor knife.

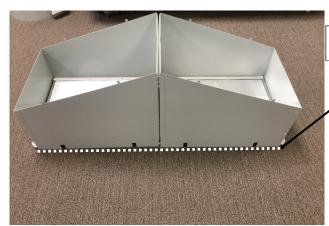

Trace outside edge of Damper Box and cut with razor knife

Trace Template onto Ceiling Follow the same process as step 3 to trace larger opening

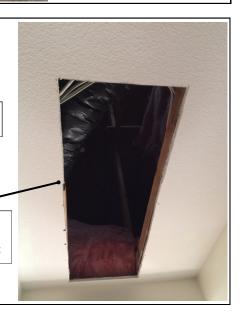

For the most current Installation Instructions, please visit www.solatube.com/instructions Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE












For the most current Installation Instructions, please visit www.solatube.com/instructions Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE







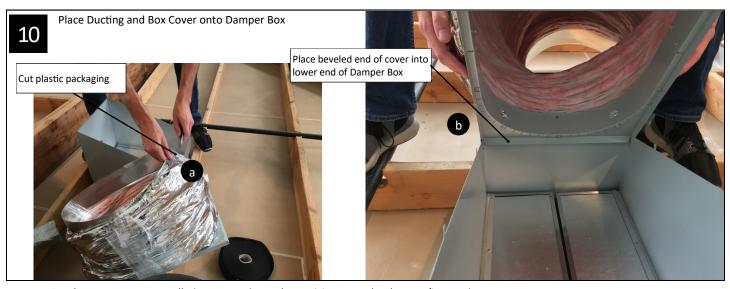


For the most current Installation Instructions, please visit www.solatube.com/instructions


Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE




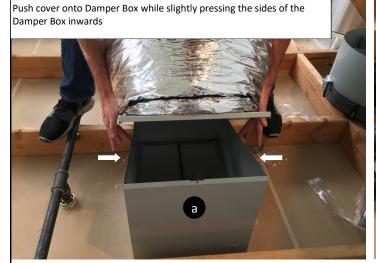



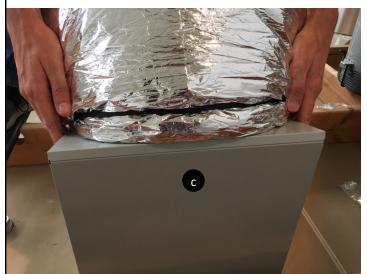

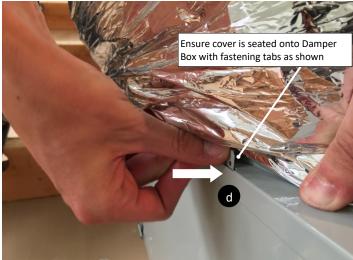

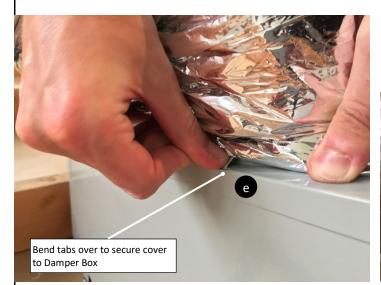


Tape seams around cover and Damper Box





For the most current Installation Instructions, please visit www.solatube.com/instructions
Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE

10

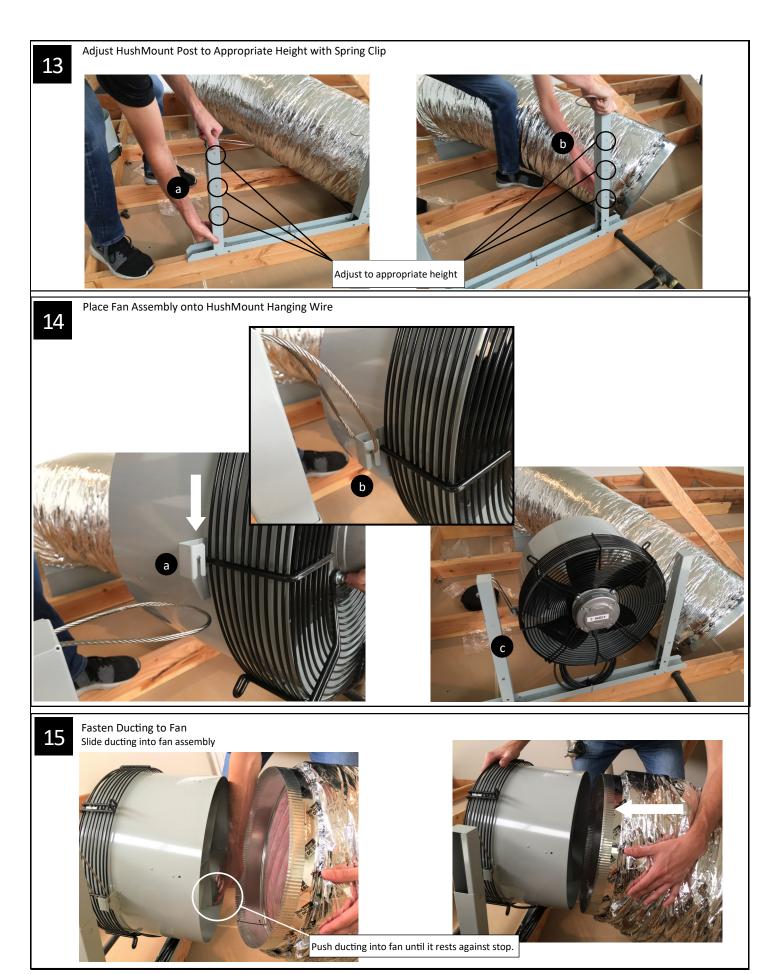

For the most current Installation Instructions, please visit www.solatube.com/instructions Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE




17 Install Strapping

12

Use a custom length of strapping material to install a center strap on the ducting to keep the ducting in an optimum curve and maximizing air flow. Fasten each side of strapping with 1-1/2 in. Hex Head Drill Tip Screws and Washers.



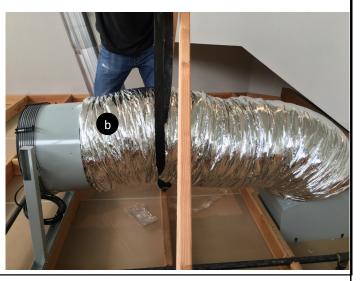

For the most current Installation Instructions, please visit www.solatube.com/instructions
Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE

18

Install Receiver

Plug Receiver into power outlet.

NOTE: If no power outlet is available, consult with a qualified licensed electrician to install an appropriate power outlet for the Whole House Fan.







Plug fan into receiver.

19

You can now enjoy the benefits of the Solatube Whole House Fan and enjoy the fresh cool breeze. Please refer to the Whole House Fan Operating Instructions (Part Number 930010) for operation of your new Solatube Whole House Fan.




Gara Note:

14


Garage Fan Instructions

Note: The following instructions should only be performed by a licensed electrician. Please follow all local municipal and building code requirements prior to making electrical connections.




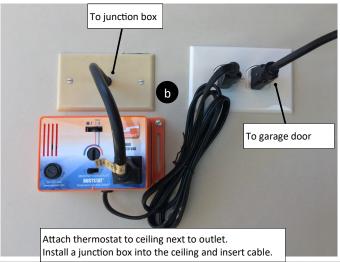

Install junction box in attic just above outlet. Connect cable from thermostat to garage fan. Secure cable trough junction box and secure to framing member.

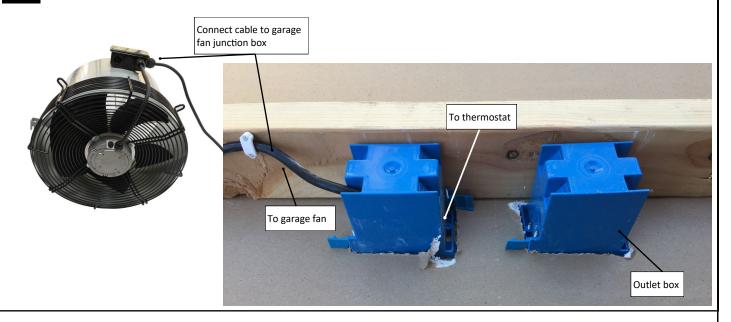



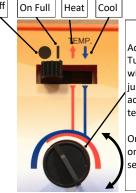

Adjust dial to desired setting. Turn dial clockwise until it reaches stop. Fan will turn on. Then turn dial counterclockwise just until fan turns off. This may need to be adjusted several times at initial set up when temperature changes.

Once set, the garage fan will automatically turn on when temperature reaches thermostat setting.

For the most current Installation Instructions, please visit www.solatube.com/instructions Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE

